

Speed (kph)	Speed (mph)	Micro-Tuner Position									
58	36.0	ENGAGED	DISENGAGED	DISENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED
55	34.2	ENGAGED	DISENGAGED	DISENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED
52	32.3	ENGAGED	ENGAGED	DISENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED
49	30.4	ENGAGED	ENGAGED	DISENGAGED	DISENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED
46	28.6	ENGAGED	ENGAGED	DISENGAGED	DISENGAGED	DISENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED
43	26.7	ENGAGED	ENGAGED	DISENGAGED	DISENGAGED	DISENGAGED	DISENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED
40	24.9	ENGAGED	ENGAGED	ENGAGED	DISENGAGED	DISENGAGED	DISENGAGED	DISENGAGED	ENGAGED	ENGAGED	ENGAGED
37	23.0	ENGAGED	ENGAGED	ENGAGED	ENGAGED	DISENGAGED	DISENGAGED	DISENGAGED	DISENGAGED	ENGAGED	ENGAGED
34	21.1	ENGAGED	ENGAGED	ENGAGED	ENGAGED	DISENGAGED	DISENGAGED	DISENGAGED	DISENGAGED	DISENGAGED	DISENGAGED
31	19.3	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	DISENGAGED	DISENGAGED	DISENGAGED	DISENGAGED	DISENGAGED
28	17.4	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED
25	15.5	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED	ENGAGED
Rope Length (m)		23	18.25	16	14.25	13	12	11.25	10.75	10.25	9.75
Rope Length (ft-off)		0	15	22	28	32	35	38	39.5	41	43
<p>Note : The LINC Panoray Display must be in Demo Mode and at set speed for these positions to be verified (Demo Mode - Select Preferences Menu (3 gear icon) in the Menu Wheel, Go to the System Tab at the bottom, Select Dealer Settings and enter the Demo Mode Password: 1919)</p>											